

FICHA DEL PRODUCTO

ITEM:

Fuente alimentacion INS-PS-1 15W para SCU200

CÓDIGO:

27131010AB

IMAGEN:



DESCRIPCIÓN
APLICACIÓN:

Esta fuente se utiliza para alimentar módulos de control SCU200, que suelen estar presentes en sistemas de automatización industrial, especialmente en soluciones de supervisión y control.

Voltaje de alimentación: 240 V

Corriente nominal (In): 0,18 A

Frecuencia (f): 50/60 ± 5% Hz

Compatible

27131000AB Unidad de Control InSite2.0 SCU200

Contact us

ABB S.p.A.
 Viale dell'Industria, 18
 2009 Vittuone (MI) Italy
<https://new.abb.com/low-voltage>



Warning! Installation by person with electrotechnical expertise only.
 Warnung! Installation nur durch elektrotechnische Fachkraft.
 Avvertenza! Fare installare solo da un elettricista qualificato.



 
 
 
QR Code for online Installation Manual.

© Copyright 2024 ABB S.p.A. All rights reserved. Specification subject to change without notice.


1. Packaging Content

- INS-PS-1
- Installation manual

2. Product overview

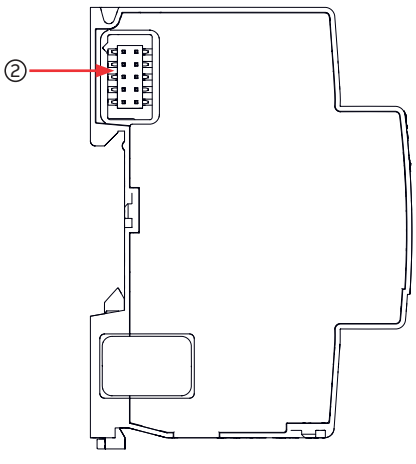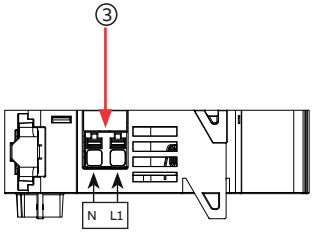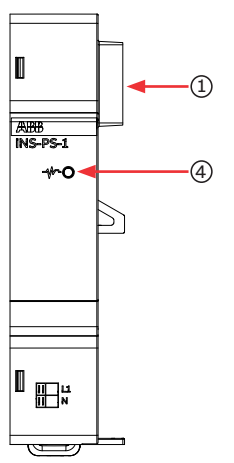

Description	
1	Modular bus connector (output)
2	Modular bus connector (input)
3	AC power input
4	Status LED

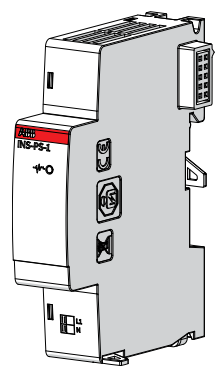 

9AKK108467A9554-E March 2024

 
InSite energy management system INSTALLATION MANUAL

InSite power supply module INS-PS-1


3. INS-PS-1 on 35mm DIN-Rail

3.1. Connection to SCU200


To connect expansion modules remove the flap covering the input connectors of SCU200

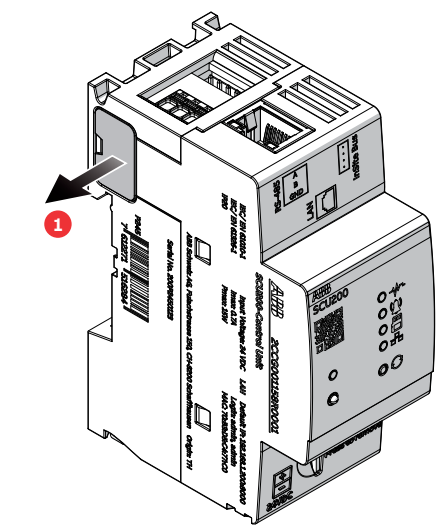

 and insert the connector plug placed on the right side of the InSite expansion module. Pay attention to the correct interlocking between modules.

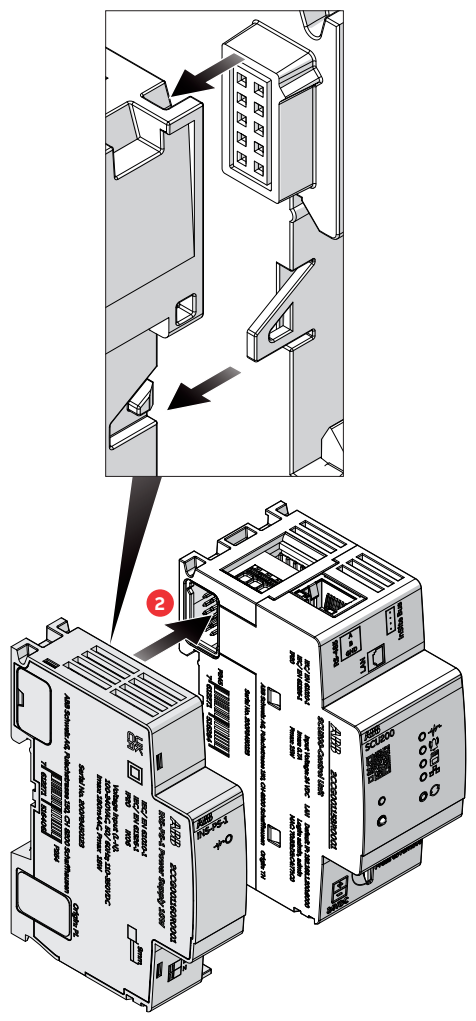

 
3.2. Connection to additional modules of InSite

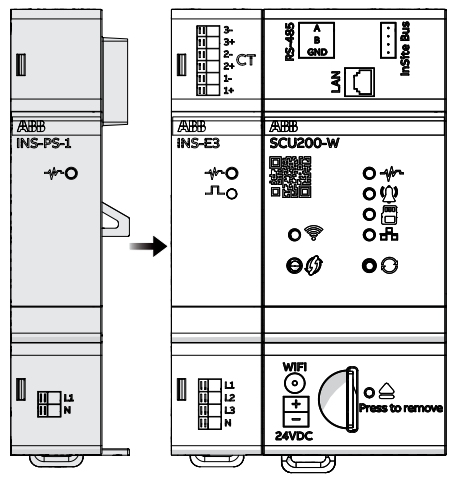


Attention: In case one or more expansion modules have to be added to SCU200 / SCU200-W plug them all first before assembling on DIN-Rail bar.

Attention: Multiple power supply modules can be utilized within a single installation. Each INS-PS-1 is designed to supply power exclusively to devices situated to their right until encountering another power supply module.

 3.3. Assembly on DIN-Rail


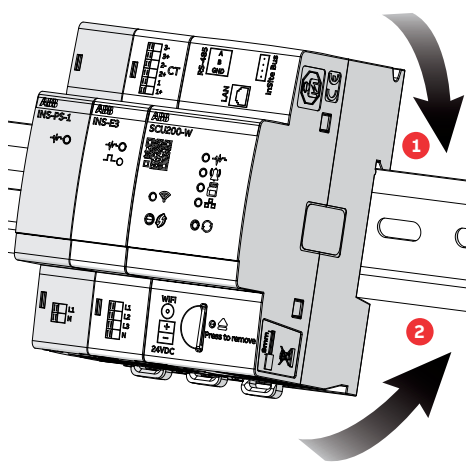


 3.4. Disassembly on DIN-Rail

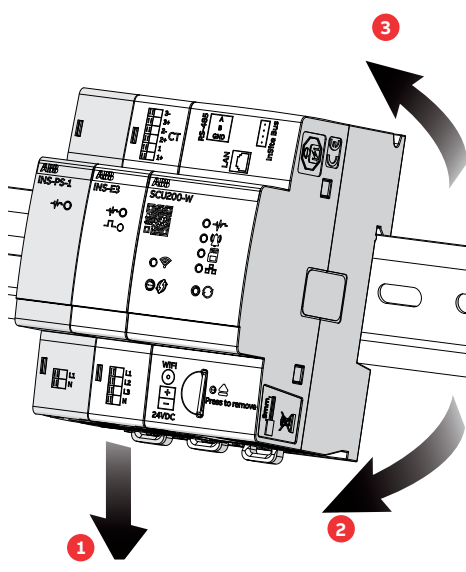

4. Connection diagram

  After mounting the modules on the DIN RAIL, proceed with the connection of the cables, paying attention not to force the cable insertion too much.

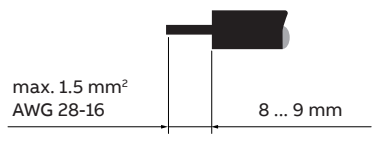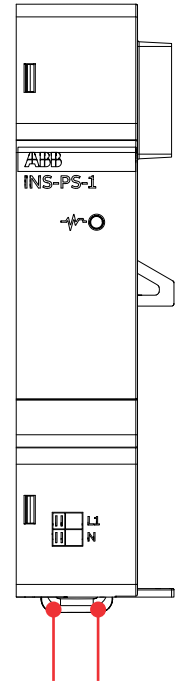

5. Setting and configuration

Detailed explanation to access web User Interface is reported in section "5. Access to control unit and configuration wizard" of the user manual. How to configure the system is detailed in section "6. WebUI" of the user manual.



Download User Manual.